
JOBBOSS SOLUTIONS

Shop Floor Planner

Turn the production schedule into clear machine assignments.

Neptune Shop Floor Planner gives floor leaders a browser workspace to find scheduled operations, compare work-center capacity and assign work to the machine or resource that will perform it. Move work from a parent group to a child resource, or redistribute it among suitable work centers.

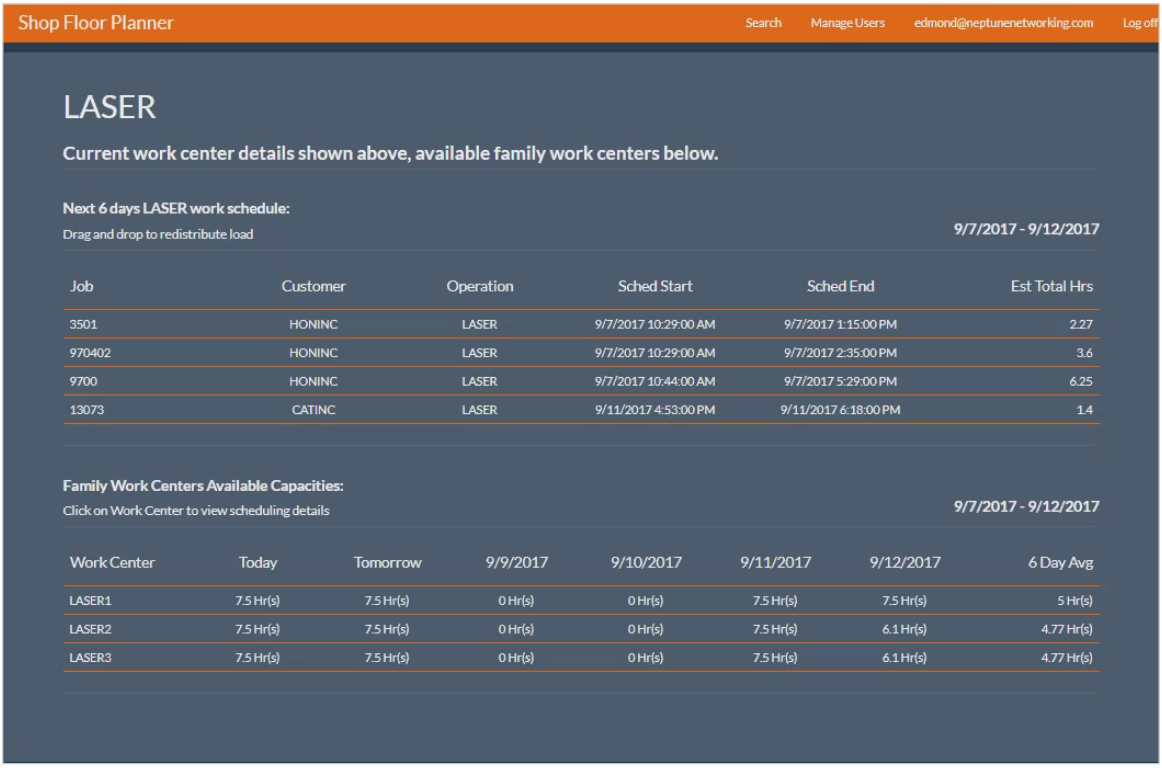

The genuine Shop Floor Planner work-center overview: scheduled operations above and related capacity below. The public recording shows an earlier layout; current date controls are covered in the training guide.


Put the plan to work on the floor

- **Make the resource choice visible.** Translate a parent work-center assignment into a specific machine, cell or alternate resource.
- **Compare available capacity.** Review scheduled work and daily availability before deciding where an operation should run.
- **Keep JobBOSS aligned.** Apply the new work-center assignment and move its existing scheduled load while retaining the scheduled dates.

CAPABILITIES AND PRACTICAL USES

Work from the group to the machine

Give production a shared view of the work and its resource choices.

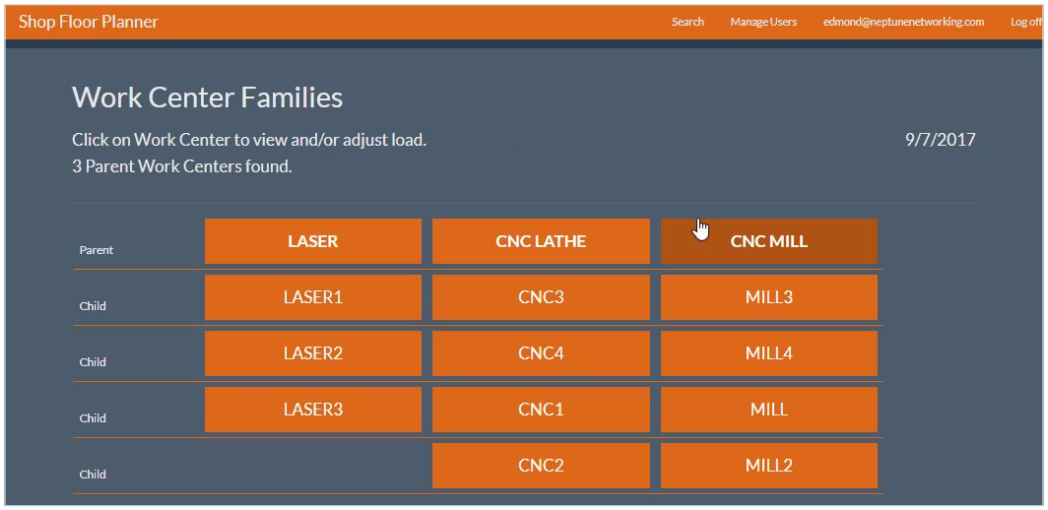

Work Center Families in the public demonstration. Parent groups organize their individual child work centers.

Capability	How the team uses it
Find the right work	Search by Job Number, Job Op Key or Work Center, or browse the configured work-center families.
Compare resource availability	Review daily available hours for related and unrelated work centers. Operation detail adds load and capacity percentages.
Choose an assignment method	Drag an operation onto a destination work center, or open its detail and use a Change WC destination button.
Use it where the decision happens	Open the installed site from a suitable computer or mobile device with access to the shop network.
Manage estimate and route effects	Use the installed recost policy for operation estimates. A separate Complete Prev action closes earlier routing operations when that work is finished.

Shop Floor Planner is one browser-based utility. Its resource assignment, capacity views and account administration are parts of the same product.

JobBOSS scheduling remains the place to change operation dates and scheduling strategy. Planner uses that schedule to make the machine-level assignment.

WORKFLOW AND LEARNING

A repeatable assignment workflow

Identify the operation, compare the options, assign and verify.

1. **Find and compare**
   Open the job or work center. Confirm the operation, its scheduled dates and a suitable destination with the required capacity.

2. **Assign the resource**
   Drop the operation onto the destination or use its Change WC button. The action applies the assignment directly to JobBOSS.

3. **Verify and communicate**
   Refresh the views and confirm the operation and load at the destination. Align the floor team and Data Collection with the new assignment.

For supervisors, planners and production control

Use Planner when work is scheduled to a capability group but the actual machine still needs to be chosen, when a suitable sibling has room, or when production needs to redistribute work while preserving its dates.

Training and resources

Illustrated Training Guide
Neptune-Shop-Floor-Planner-Training.pdf walks through sign-in, search, family and capacity views, both assignment methods, date filters, recosting, Complete Prev, verification and a first-use exercise.

Watch the Shop Floor Planner demonstration

The approximately 23-minute recording shows the browser application, work-center families, reassignment, job detail and tablet use. Use it alongside the current guide.

Talk with Neptune

Discuss your parent/child work-center structure, confirm the installed workflow and arrange setup or training assistance.

Neptune Networking Inc. | Revision 2026-11-04